

FUJIFILM


instax mini 12™

INSTANT CAMERA




User's Guide/Safety Precautions


How to install/replace the required 2 AA batteries (2 AA batteries included)

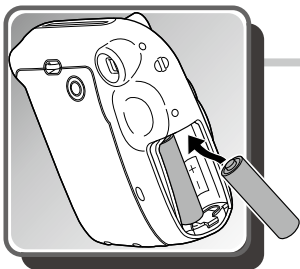


1

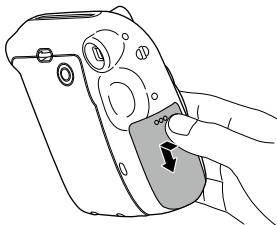

2

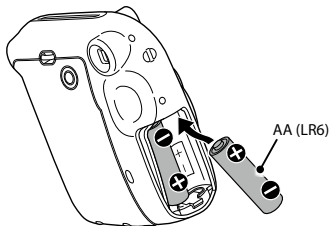



3

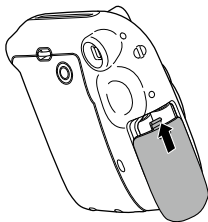


How to insert the INSTAX MINI™ instant film cartridge




1

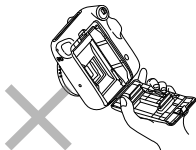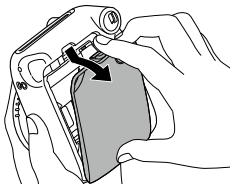

2

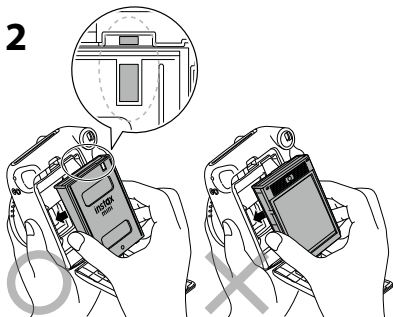



3

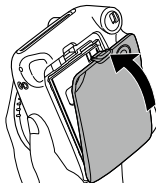


How to eject the black INSTAX MINI instant film cover




1

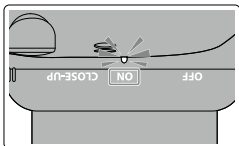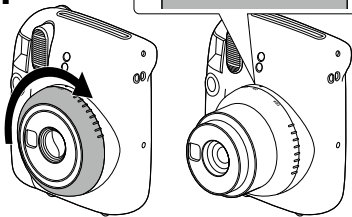

2

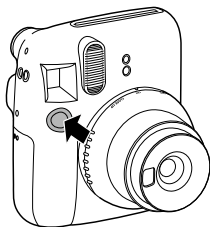


3

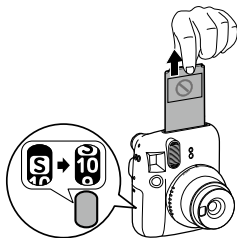


How to remove the INSTAX MINI instant film cartridge




1

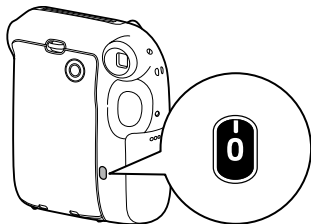

2

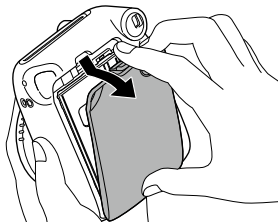


3

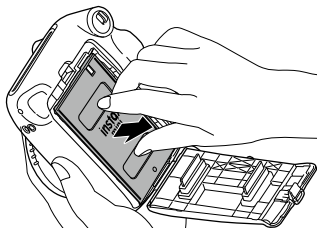


- For instructions on how to insert batteries and how to insert and remove an INSTAX MINI instant film pack, see pages 2 to 5.

Names of Parts

Front

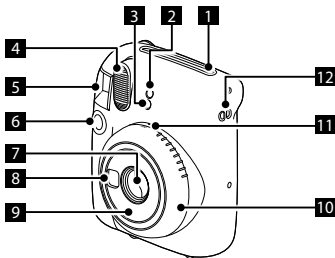

Back

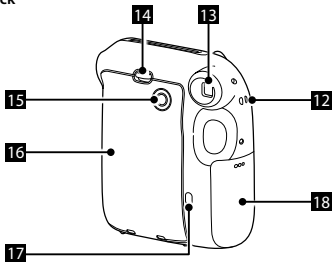


- 1** Film ejection slot
- 2** Flash light sensor
- 3** AE light sensor
- 4** Flash lampface
- 5** Viewfinder
- 6** Shutter button
- 7** Lens cover / Lens
- 8** Selfie mirror
- 9** Lens barrel
- 10** Lens ring / Power
- 11** Flash charging lamp
- 12** Strap eyelet
- 13** Viewfinder eyepiece
- 14** Back cover lock
- 15** Film confirmation window
- 16** Back cover
- 17** Film counter
- 18** Battery lid

Taking Pictures

Do not open the back camera cover until you have used all images in the loaded INSTAX MINI film pack. Opening the camera door will expose the remainder of the unused film pack, turning it white and rendering it no longer usable.

- 1** Once the batteries are loaded, turn on the camera by rotating the lens ring to ON.

The lens barrel extends and the flash charging lamp blinks and then lights up. (Blinking indicates that the flash is charging.)

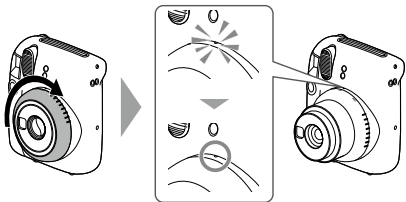


- 2** Hold the camera, look through the viewfinder of the camera to frame your desired composition, and press the shutter button.

* The shutter button cannot be pressed while the flash is charging.




- 3** When the sound of the film being ejected stops, grasp the edge of the ejected film and take the film out.

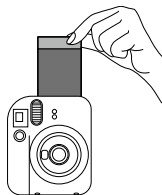

The film counter decreases in numerical order, counting down from "10" with each photo taken. "0" will be displayed when the film is finished and after the last photo has been taken.

- 4** When you have finished taking photos, turn off the camera by rotating the lens ring to OFF.

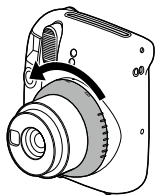


If the camera malfunctions, remove the batteries while the power is on and then reinsert them to reset the camera.


Taking a Photo in Close-Up Mode


Taking a close-up

Close-Up Mode allows you to take a close-up photo of your subject.

- 1 Turn the lens ring to the "CLOSE-UP" position and the lens barrel will pop out automatically. The viewfinder field of view switches to the close-up shooting setting.

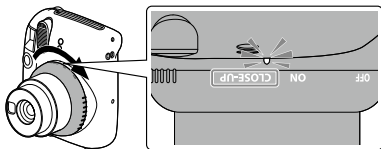


- 2 Hold the camera so that the  mark in the viewfinder is in the center of the subject, then press the shutter button to take a photo.

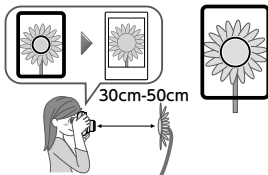


Taking a picture of yourself

You can also use Close-Up Mode to take selfies. Confirm your composition using the selfie mirror at the front of the lens, then you can take a photo.

 - 1 Turn the lens ring to the "CLOSE-UP" position and the lens barrel will pop out automatically. The viewfinder field of view switches to the close-up shooting setting.
- 2 Hold the camera securely so that your face is roughly 11.8 inches to 19.7 inches (30 cm - 50 cm) away from the end of the lens.



- 3 Confirm the composition using the selfie mirror, then push the shutter button to take the photo.

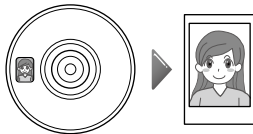

Precautions for Taking Photos

Precautions for Holding the Camera




Correct way to hold



Do not cover the flash lampface with your finger



Do not cover the flash light sensor and AE light sensor with your finger

- Make sure that your finger or the strap does not cover the flash light sensor, AE light sensor, flash lampface, lens, or film ejection slot.
- Hold the camera so that the flash lampface is at the top when taking a horizontal picture.
- Do not take photos in locations where flash photography is forbidden.
- Do not grasp the lens barrel when holding the camera. The finished photos may be adversely affected.
- Look into the viewfinder so that the  mark in the viewfinder appears in the center.
- Be careful not to touch the lens when you press the shutter button.
- **When taking photos in the dark, hold the camera firmly to prevent blurring, as the shutter speed may be slow.**

Distances for Normal Mode and Close-Up Mode

- In normal mode, take a photo at a distance of at least 19.7 inches (0.5 m) from the subject. The effective flash range is up to approximately 7.2 ft (2.2 m).
- Use Close-Up Mode when holding the camera closer than 19.7 inches (0.5 m) from the subject. Close-Up Mode allows you to take photos at a range of 11.8 inches to 19.7 inches (30 to 50 cm) from the subject.

Flash charging lamp statuses and error solutions

Flash charging lamp status	Description
Lit	Ready to take a photo.
Off	Camera is off.
Slow flashing	The flash is charging. Please wait until the charging lamp lights.
Repeated slow flashing and quick flashing	The battery voltage is low.
Quick flashing	An error has occurred. <ul style="list-style-type: none">• The film is jammed.• Incorrect lens ring position.• Other error

Main errors	Solution
The battery voltage is low	Replace the batteries with new ones (alkaline batteries).
Film jammed	Do not pull out the film. Remove the batteries and reinsert new alkaline batteries. It may be possible to eject the film after these steps are taken.
Incorrect lens ring position	Set the lens ring in the proper position.
Other	The camera may be malfunctioning. Remove and reinsert the batteries while the power is on.

IMPORTANT SAFETY NOTICE

- Do not use this product and its accessories for a purpose other than taking instant photos.
- This product has been designed with safety in mind, but please read the following safety precautions carefully and then use the product correctly.
- After reading this User's Guide, be sure to keep it in an easy-to-access place where you can refer to it whenever necessary.




WARNING

This symbol indicates danger, which could result in product damage, injury or death. Follow the instructions indicated to avoid damage to the camera or injury.

CAUTION

This indicates a matter that may lead to injury or physical damage if ignored or incorrectly handled.

WARNING


-  Never attempt to take this product apart. You may be injured.
-  Do not touch this product if the inside of it becomes exposed due to dropping, etc. This product has high-voltage circuitry that may cause injury or electric shock.
-  If you notice anything abnormal, such as the camera (batteries) becoming hot, emitting smoke, or making a burning smell, remove the batteries immediately. Fire or burns may occur (be careful not to burn yourself when removing the batteries).

- ⚠ Never take flash photographs of people riding bicycles, driving cars, skateboarding, riding a horse and the like. The flash can be startling, distract, frighten animals, and otherwise cause an accident.
- ⚠ If you drop the camera in water or if water or a piece of metal or other foreign object gets inside, remove the batteries immediately. Heat generation or fire may occur.
- ⚠ Do not use this camera in places where there is flammable gas or near open gasoline, benzine, paint thinner or other unstable substances which can give off dangerous vapors. Failure to do this could result in explosion or fire.
- ⚠ Do not disassemble, heat the batteries, expose the camera or batteries to a fire or to an electrical short circuit. The batteries may rupture.
- ⚠ Use only AA (LR6) batteries. Heat generation or fire may occur if other batteries are used.
- ⚠ Keep batteries out of the reach of infants. An infant may accidentally swallow a battery. In the event that a battery is swallowed, seek medical attention immediately.

CAUTION

- ⚠ If the camera is not functioning correctly, to avoid injury do not attempt to repair the camera yourself.
- ⚠ Do not touch any parts within the inside of the back cover. This may cause injury.
- ⚠ Do not handle this product with wet hands. Electric shock may occur.
- ⚠ Keep the product out of the reach of infants and small children. Injury may occur.
- ⚠ Do not cover or wrap the camera in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.

- ⚠ Using a flash too close to a person's eyes may for the short term affect their eyesight. Take care when taking pictures of infants and young children.
- ⚠ Take care not to make a mistake with the ⊕ and ⊖ polarities when inserting the AA (LR6) batteries. Damage to surrounding area may occur if the camera is damaged or if battery fluid leaks out.
- ⚠ Do not touch moving parts inside the camera. You may be injured.

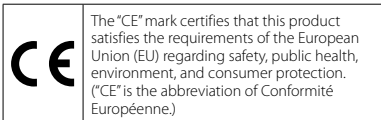

- **Legally required regulation compliance displays are located on the inside of the back cover of the camera.**

Handling

■ Handling of Camera

1. The camera is a precision instrument, so do not get it wet, drop it, or subject it to shock. Also, do not place the camera where it will be exposed to sand, dirt or dust particles.
2. Do not use solvent such as thinner or alcohol to wipe off dirt.
3. Any dirt or dust in the film chamber may affect the finish of the print. Do not allow the film chamber to get dirty or dusty.
4. Do not leave the camera in a closed motor vehicle, on the beach or in another hot or humid place for any period of time.
5. Gas containing moth repellent may adversely affect the camera and INSTAX instant film. Avoid keeping the camera and INSTAX instant film in a chest of drawers, etc. with mothballs.
6. The operating temperature range of this camera is 41°F (+5°C) to 104°F (+40°C).
7. When taking photos, please be careful not to violate the rights of others, such as copyright, image rights, and privacy, or violate public order. Any act that violates the rights of others, or is contrary to public order or morals, or constitutes a nuisance, may be subject to legal penalties and claims for damages.
8. This camera is for general household use. It is not suitable for commercial photography and other applications where a large number of prints are needed or involved.
9. Before using a commercially available strap, check the strength of the strap. Be especially careful when using a strap for mobile phones and Smartphones because such straps are made for lightweight devices.
10. If you are not using your camera for a long period of time, unload the batteries and keep it where it will avoid heat, dust and moisture.

11. Remove soil and dust from the viewfinder window, etc. with an air blower or by wiping gently with a piece of soft cloth.

■ Cautions During Printing



■ INSTAX MINI Instant Film and Photos

For details on the handling of film and photos, see the instructions written on the FUJIFILM INSTAX MINI instant film box.

1. Keep film in a cool place. In particular, do not leave film in an extremely hot place, such as in a closed motor vehicle, for a long period of time.
2. Do not tear, cut or make a hole in instant film. Do not use film that is damaged.
3. Use film as soon as possible after inserting it in the camera.
4. If film has been kept in a place where the temperature is extremely low or high, allow it to become accustomed to a normal temperature before taking pictures.
5. Use film before the film expiration date referenced on the package.
6. Avoid airport checked luggage inspection and other strong X-ray exposure. Unused film is susceptible to the effect of fogging, etc. We recommend that you carry film onto aircraft in carry-on luggage (check with the relevant airport for more information).
7. Avoid exposing your instant photos to strong light, and store them in a cool and dry place.

- Do not cut, peel apart or puncture new or newly used instant print film. Film contains small amount of highly caustic paste; paste can remain active up to 10 minutes after instant photo is taken. Be especially careful not to let infants or pets put the film into their mouths. Paste should not come into contact with skin or clothes.
- If you accidentally touch the paste of unused INSTAX MINI instant print film, immediately wash it off with plenty of water. If the paste comes into contact with the eyes or mouth, wash the area and then seek medical attention. The alkalinity of INSTAX MINI instant print film will weaken approximately 10 minutes after the instant photo is ejected from the camera.
- Do not store instant photos in a sealed bag, as this may cause discoloration.

■ Cautions on Handling of Instant Film and Finished Photos

For details, see the instructions of FUJIFILM INSTAX MINI instant film.



For customers in the USA:**FCC Statement**

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For more information, access the website below.

http://www.fujifilm.com/products/instant_photo/cameras/instax_mini_12/

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Fujifilm responsible for compliance could void the user's authority to operate the equipment.

For customers in Canada :**CAN ICES-003 (B)/NMB-003 (B)**

This Class B digital apparatus complies with Canadian ICES-003.

Notes on Disposing of the Camera

Proper Disposal – US, Canada and Latin America



Disposal of Electric and Electronic Equipment in Private Households
Disposal of used Electrical & Electronic Equipment
(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials may help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local city recycling office, your household waste disposal service or the authorized Fujifilm dealer from which you purchased the product.

For proper disposal in the United States at product end-of-life, please contact 1-800-800-3854 Option #1 INSTAX.

For proper disposal in Canada at product-end-of-life, please contact 1-800-461-0416.

For proper disposal in Latin America at product end-of-life, please contact your local FUJIFILM distributor or dealer for disposal instructions.

Specifications

Film used	FUJIFILM INSTAX MINI instant film (sold separately)
Photo Picture Size	2.4 in. x 1.8 in. (62 mm x 46 mm)
Lens	2 components, 2 elements, $f = 60$ mm, 1:12.7
Viewfinder	Real image finder, 0.37 \times , with target spot Features parallax correction function for Close-Up Mode
Shooting Range	11.8 in. (0.3 m) and beyond (use Close-Up Mode for 11.8 in. (0.3 m) to 19.7 in. (0.5 m))
Shutter	Programmed electronic shutter 1/2 to 1/250 sec. Slow synchro for low light
Exposure Control	Automatic, Lv 5.0 to 14.5 (ISO 800)
Film Ejection	Automatic
Film Developing Time	Approx. 90 seconds (varies depending on the ambient temperature)
Flash	Constant firing flash (automatic light adjustment), recycle time: 7 seconds or less (when using new batteries), effective flash range: 11.8 in. (0.3 m) to 7.2 ft (2.2 m)

Power Supply	Two AA-size alkaline batteries (LR6), capacity: approx. 10 INSTAX MINI instant film packs of 10 exposures each per set of new batteries (depends on usage conditions) * The supplied batteries are for initial use. When they run out, replace them with new ones (Two AA-size alkaline batteries LR6). * Manganese batteries cannot be used.
Auto Power Off Time	After 5 minutes
Other	Includes film counter and film pack confirmation window
Dimensions	4.09 in. x 2.62 in. x 4.80 in. (104 mm x 66.6 mm x 122 mm)
Weight	0.67 lbs / 306 g (without batteries and instant film loaded, and without strap attached)

Information for Fujifilm in the United States

FUJIFILM North America Corp.
200 Summit Lake Drive
Valhalla, New York 10595, USA

Information for Fujifilm in Canada

FUJIFILM Canada Inc.
600 Suffolk Court
Mississauga, Ontario L5R 4G4, Canada

FUJIFILM, INSTAX, INSTAX MINI and INSTAX MINI 12 are trademarks of FUJIFILM Corporation and its affiliates.

© 2022 FUJIFILM Corporation. All rights reserved.

[**en**] If you have any inquiries about this product, please contact a FUJIFILM authorized distributor or dealer, or access the website below.

[**fr**] Pour toute question concernant ce produit, veuillez contacter un distributeur ou un revendeur FUJIFILM agréé ou visiter le site Internet ci-dessous.

[**es**] Si usted tiene alguna pregunta sobre este producto, por favor póngase en contacto con un vendedor o un distribuidor autorizado de FUJIFILM o acceda al sitio web siguiente.

<https://www.fujifilm.com/>

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN